


TECHNICAL INSTRUCTIONS
FOR
SPECIAL SERVICE CAMPAIGN 70F (SAFETY RECALL)
2007 AND EARLY 2008 MODEL YEAR CAMRY DRIVER SIDE ALL
WEATHER FLOOR MAT

I. OPERATION FLOW CHART

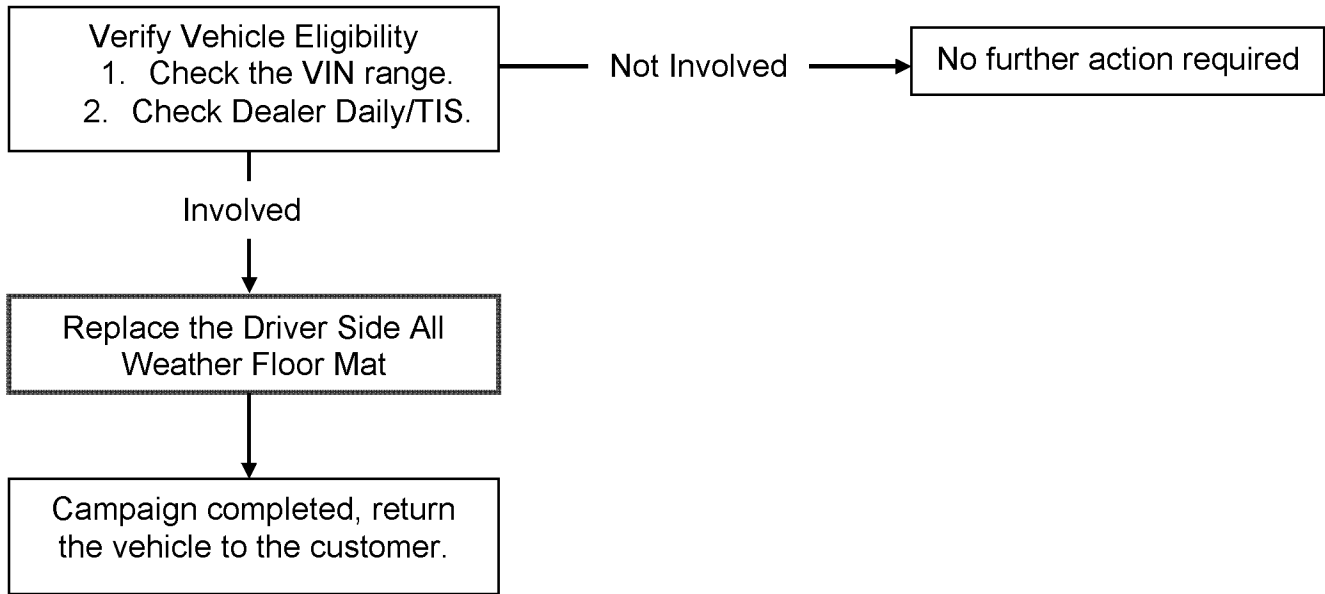

II. IDENTIFICATION OF AFFECTED VEHICLES

A. AFFECTED VINS

- Check Dealer Daily/TIS to confirm the VIN is involved in this SSC. This will verify the vehicle is affected and has not already been completed prior to dealer shipment or by another dealer.
- TMS warranty will not reimburse dealers for repairs conducted on vehicles that are not affected or were completed by another dealer.

III. PREPARATION

A. PARTS

Part Number	Part Description	Quantity
PT908-0307F-02	Camry AWFM Black	1
PT908-0307F-14	Camry AWFM Brown	1

B. TOOLS

- No tools are required for this repair

[APG]

IV. WORK PROCEDURE


A. REPLACE THE DRIVER SIDE ALL WEATHER FLOOR MAT WITH THE NEWLY DESIGNED ONE

Remove the **OLD** driver side All Weather Floor Mat (see the diagram below for key areas to aid in identification of the old vs. the newly designed mat) and install a **NEW** one.

IMPORTANT: MAKE SURE THE RETAINING HOOKS (CLIPS) ARE PROPERLY INSTALLED AND SECURED TO THE VEHICLES CARPET AND THE ALL WEATHER FLOOR MAT.

OLD

NEW



V. RECALLED PARTS RECOVERY

The returned floor mats will be placed on Warranty Parts Recovery and dealers will be required to return the original floor mats to TMS. Floor

[APG]

Mats that are not returned will result in the claim being debited.

[APG]